


Connecting AVer Visualizers with HVC Series VC Systems

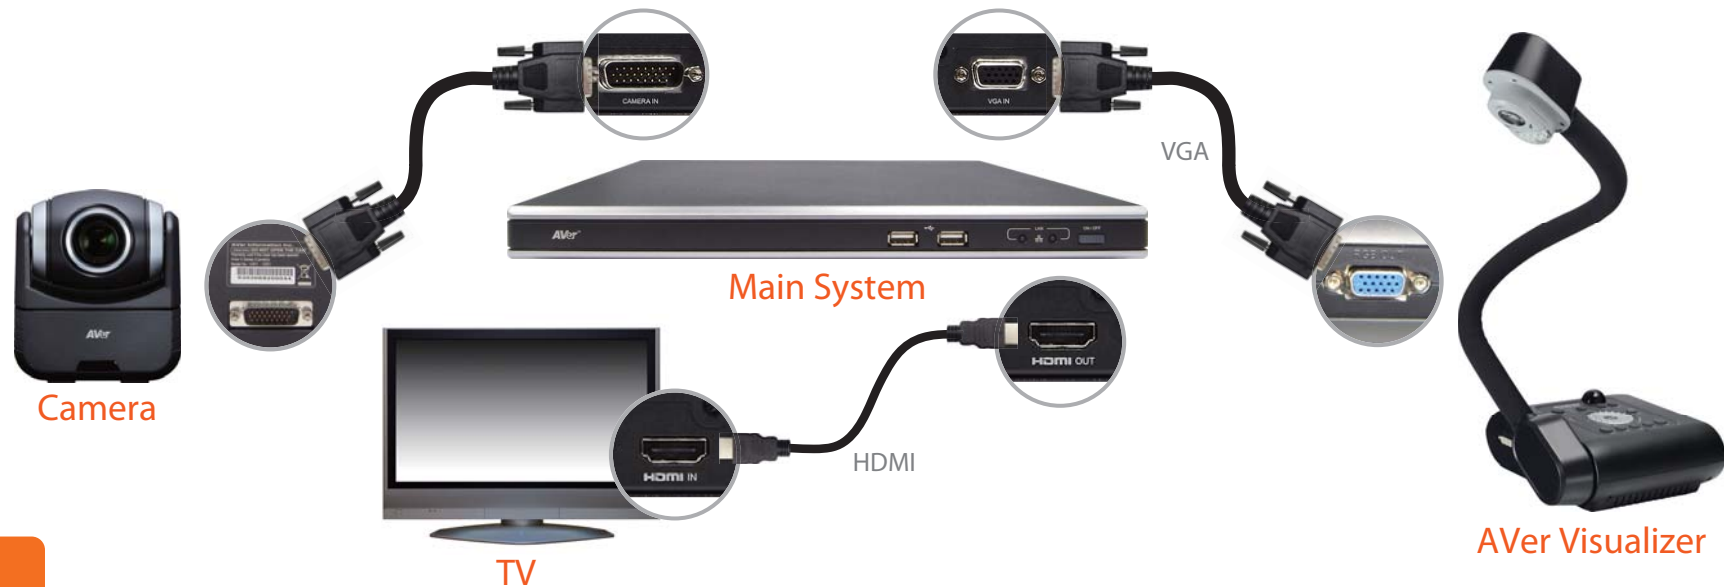

Steps

1. Set up your HVC series video conferencing system per the instructions in the user manual
2. Connect the Visualizer (**VGA Out**) with the main system / codec (**VGA In**) using a VGA Cable. If you are already engaged in a call at the time of connecting the Visualizer, please proceed to Step 4
3. Your HVC series VC system should detect the Visualizer and present the live image automatically upon connection
4. If you are engaged in a call before the Visualizer is connected, press the "Present" button on the Remote Control and select "VGA" from the onscreen menu to view / share the live image

NOTE:

1. If the message "VGA-In: Unplugged" appears on the screen, please confirm that the VGA cable is connected properly on both ends
2. If the message "VGA-In: Unsupported Resolution" appears on the screen, please use another VGA cable. If the problem persists, please go to

<http://communication.aver.com/technical-support>